



L11D1GXX1-00000-000

Normally connected to dash light circuit to be on when your dash lights are on.

Connect #2 from your source with the inline fuse.

Connect #4 to your relay or acc.

Common ground for both lights in the switch

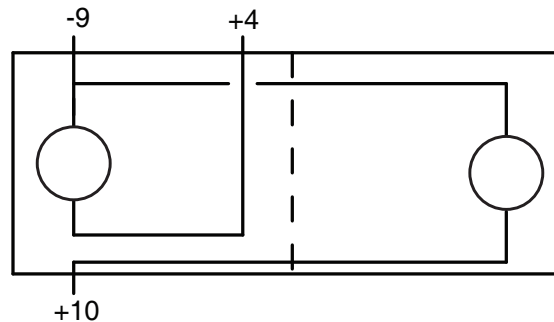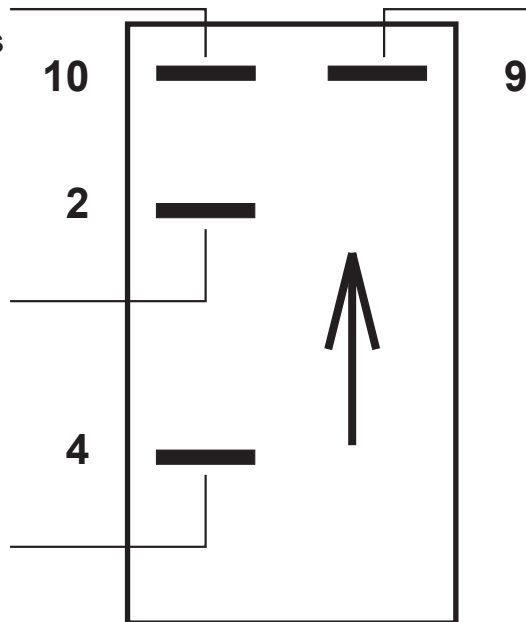

Pin - Tab Outs

- 2 - Incoming from power source such as battery, switched source, etc.
- 4- Outgoing to relay, accessory or equipment
- 9- Ground for the internal lights of the switch
- 10- Positive side of upper light. Normally connected to running lights, or switched source.

This is the basic layout of the switch per the manufacturer's guidelines. Care should be taken to ensure that you, the vehicle or equipment's owner, and your professional installer have properly fused, wired, and relayed your accessories per the manufacturer's instructions. OTRATTW and Leapfrog Studios take no responsibility for damage, accidents, or injuries resulting from the installation of Carling Technology switches and accessories.